



STEP BY STEP GUIDE TO USING BUGGY

STEP 1: Ensure foot brake is on and insert key. Ensure buggy is in neutral. Make sure the screen is in a secure position.

STEP 2: Ensure your clubs are securely fastened to the cart using the straps provided.

STEP 3: Ensure all passengers are seated; however, passengers must not be in the buggy until they reach the first tee.

STEP 4: Turn the key to start the buggy ensuring it is in neutral then engage the appropriate forward or reverse gear. Reverse is recognised by an audible noise.

ADVICE ON DRIVING GOLF CARTS

- Golf carts are easy to lose control or flip over so drive sensibly — stick to the fairways and cart paths.
 - Drive slowly over uneven ground and particularly when travelling downhill.
 - Avoid turning across a slope — use extreme caution and drive very slowly.
 - Do not drive or park within 10 yards of a tee, bunker putting green or approach to a green.
 - Do not take the cart into the rough.
 - Never drive through casual water on the fairways.
 - No closer than 5M from any green, bunker or hazard.
-

COURSE NOTES

3rd Hole – Follow the path on the right of the greenside bunker to 4th tee

7th Hole – Park below the greenside bunker

9th Hole – Drive straight up the hill – avoid cross slope travel

11th Hole – Stay to the right of the righthand bunker

12th Hole – Use the buggy path on the far right to descend to the main fairway then turn immediate left crossing the fairway. Stay on the left of the fairway making your way straight to the left of the green. Do not take the cart onto the main sloping fairway. Use extreme caution if turning across the slope.

13th Hole – Drive behind the green before crossing the bridge

17th Hole – Keep to the right side of the green

18th Hole – Use the gap in the wall to access the roadway to the 18th tee

Please report any maintenance issues to the Club Pro

Keep safe and enjoy your day!